



How to setup time on S160 Android system

1. Enter setting.

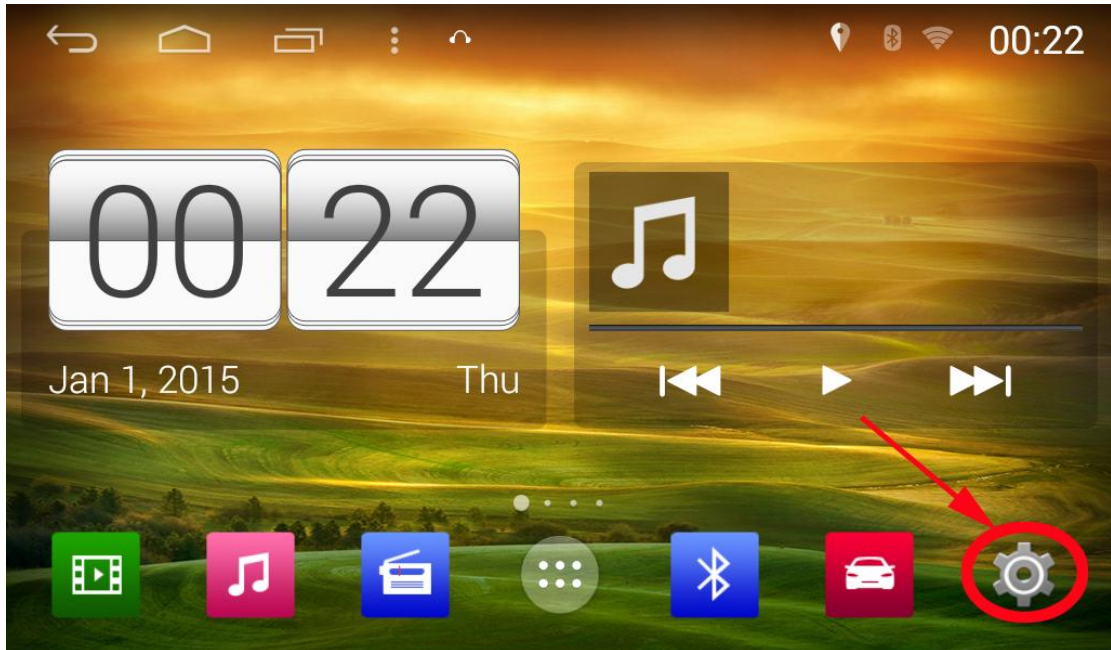

2. Enter "Date & time" .

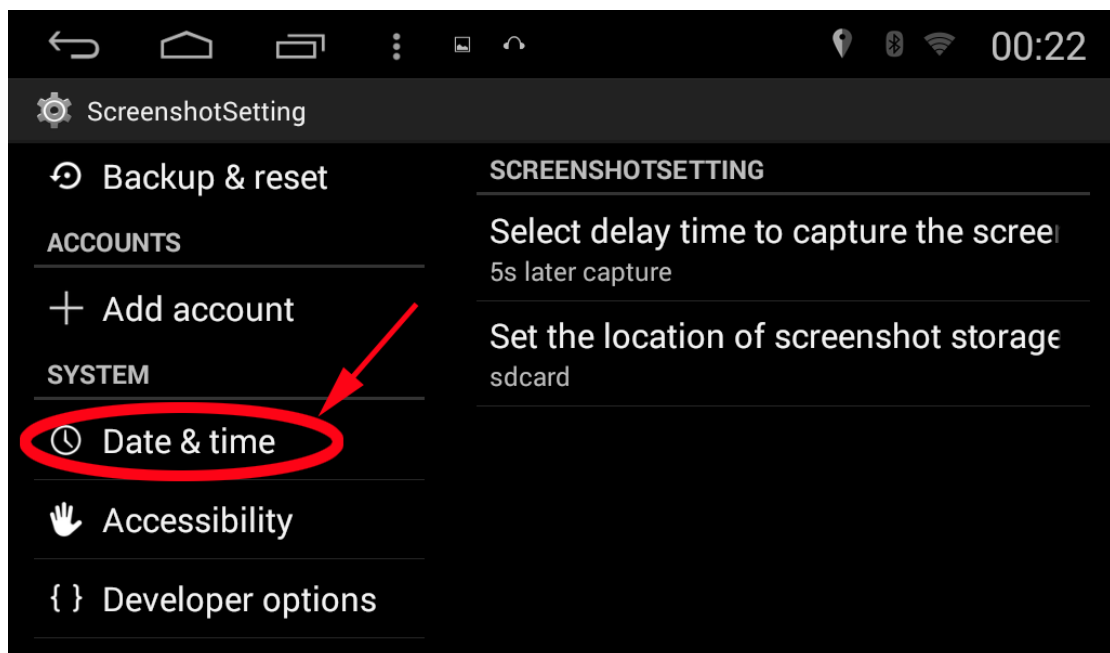

3. Enable "Automatic date & time" and "Automatic time zone" .

