

How to setup time zone on S100

The cities are international, as these radios are sold worldwide. So you need to setup the time zone to your local area. Please read below steps to see how to setup time zone.

1. Make sure your car is in an open area and get good GPS reception.
2. Turn on the radio and check Menu/Tool/Monitor/UTC time, it should display your current GPS position on this screen. The time difference between UTC time and your local time is the time zone you need to setup. **For example the UTC time is 2015.09.13, 14:25, and your local time is 2015.09.13,9:25 AM, then the time zone is -5.**

You need to setup both S100 system time zone and navigation time zone.

A. S100 system time zone setup

Check Menu/Setting/General/Time/Time Zone/Setup the time zone to your local time zone.

These are the American cities to chose from:

- HST - Hawaii (10) Hawaii UTC-10
- AKST - Alaska (9) Alaska UTC-9
- PST - Pacific (-8) Tijuana UTC-8
- MST - Mountain (-7) Mountain Country UTC-7
- CST - Central (-6) Saskatchewan/Galapagos Province UTC-6
- EST - Eastern (-5) Bogota/Ecuador/Colombia UTC-5

For example, your local area is -5 time zone, so you need to choose - EST - Eastern (-5) Bogota/Ecuador/Colombia UTC-5.

B. Navigation time zone setup

Press NAVI icon or button to enter navigation software, More/Settings/Regional/Time Zone, setup the time zone to your local time zone.

For example, your local area is -5 time zone, so please choose GMT - 5. No need to choose daylight savings.